# 4 Channel Constant Voltage Power Repeater

4 Channel/PWM signal input/Constant voltage output/3KV optoelectronic isolation



CE RoHS emc LVD

#### Features

- 12-36V constant voltage power repeater.
- 4 channel, 5A per channel.
- To receive PWM signal control.
- Power repeater in series or in parallel to expand output unlimitedly.
- Apply to single color, dual color, RGB or RGBW constant voltage LED strip or module.

### Technical Parameters

| Input and Output |  |  |
|------------------|--|--|
| 1 2-36VDC        |  |  |
| 20.5A            |  |  |
| PWM              |  |  |
| 4 x (12-36)VDC   |  |  |
| 4CH,5A/CH        |  |  |
| 4 x (60-180)W    |  |  |
| Constant voltage |  |  |
|                  |  |  |


| Environment             |                  |
|-------------------------|------------------|
| Operation temperature   | Ta:-30°C ~ +55°C |
| Case temperature (Max.) | Tc: +85°C        |
| IP rating               | IP20             |

| Safety and EMC       |                    |
|----------------------|--------------------|
| Salely alla LMC      |                    |
| EMC standard (EMC)   | EN301 489,EN 62479 |
| Safety standard(LVD) | EN60950            |
| Certification        | CE,EMC,LVD         |

| Warranty and Protection |  |  |  |
|-------------------------|--|--|--|
| Warranty                | 5 years  |  |  |
| Protection              | Reverse polarity<br>Over-heat<br>Short circuit |  |  |


| Weight       |         |
|--------------|---------|
| Net weight   | O.120kg |
| Gross weight | 0.140kg |

#### Mechanical Structures and Installations

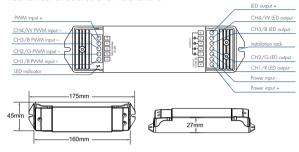


## Wiring Diagram

Parallel connection

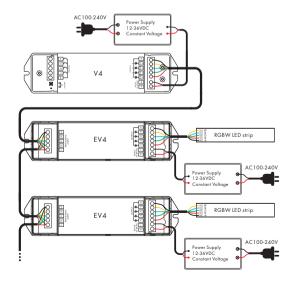

User Manual Ver 1.0.4

#### Series connection

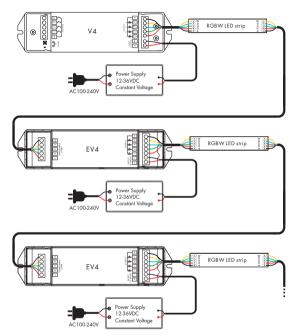

Note: If the power repeater is over heat or short circuit, the LED indicator will blink.

## Malfunctions analysis & troubleshooting

| Malfunctions  | Causes  | Troubleshooting  |
|---|---|--|
| No light  | No power. Wrong connection or insecure.   | Check the power. Check the connection.   |
| Wrong color   | 1. Wrong connection of R/G/B/W wires.   | 1. Reconnect R/G/B/W wires.  |
| Uneven intensity<br>between front and<br>rear,with voltage drop | Output cable is too long. Wire diameter is too small. Overload beyond power supply capability. Overload beyond controller capability. | Reduce cable or loop supply. Change wider wire. Replace higher power supply. Add power repeater. |

## Safety & Warnings

- 1. The product shall be installed and serviced by a qualified person.
- 2. This product is non-waterproof. Please avoid the sun and rain.
- 3. Good heat dissipation will prolong the working life of the controller, Please ensure good ventilation.
- 4. Please check if the output voltage of any power supplies used comply with the working voltage of the product.
- Ensure all wire connections and polarities are correct and secure before applying power to avoid any damages to the LED lights.
- 6. If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.

User Manual Ver 1.0.4